


COMPONENTS

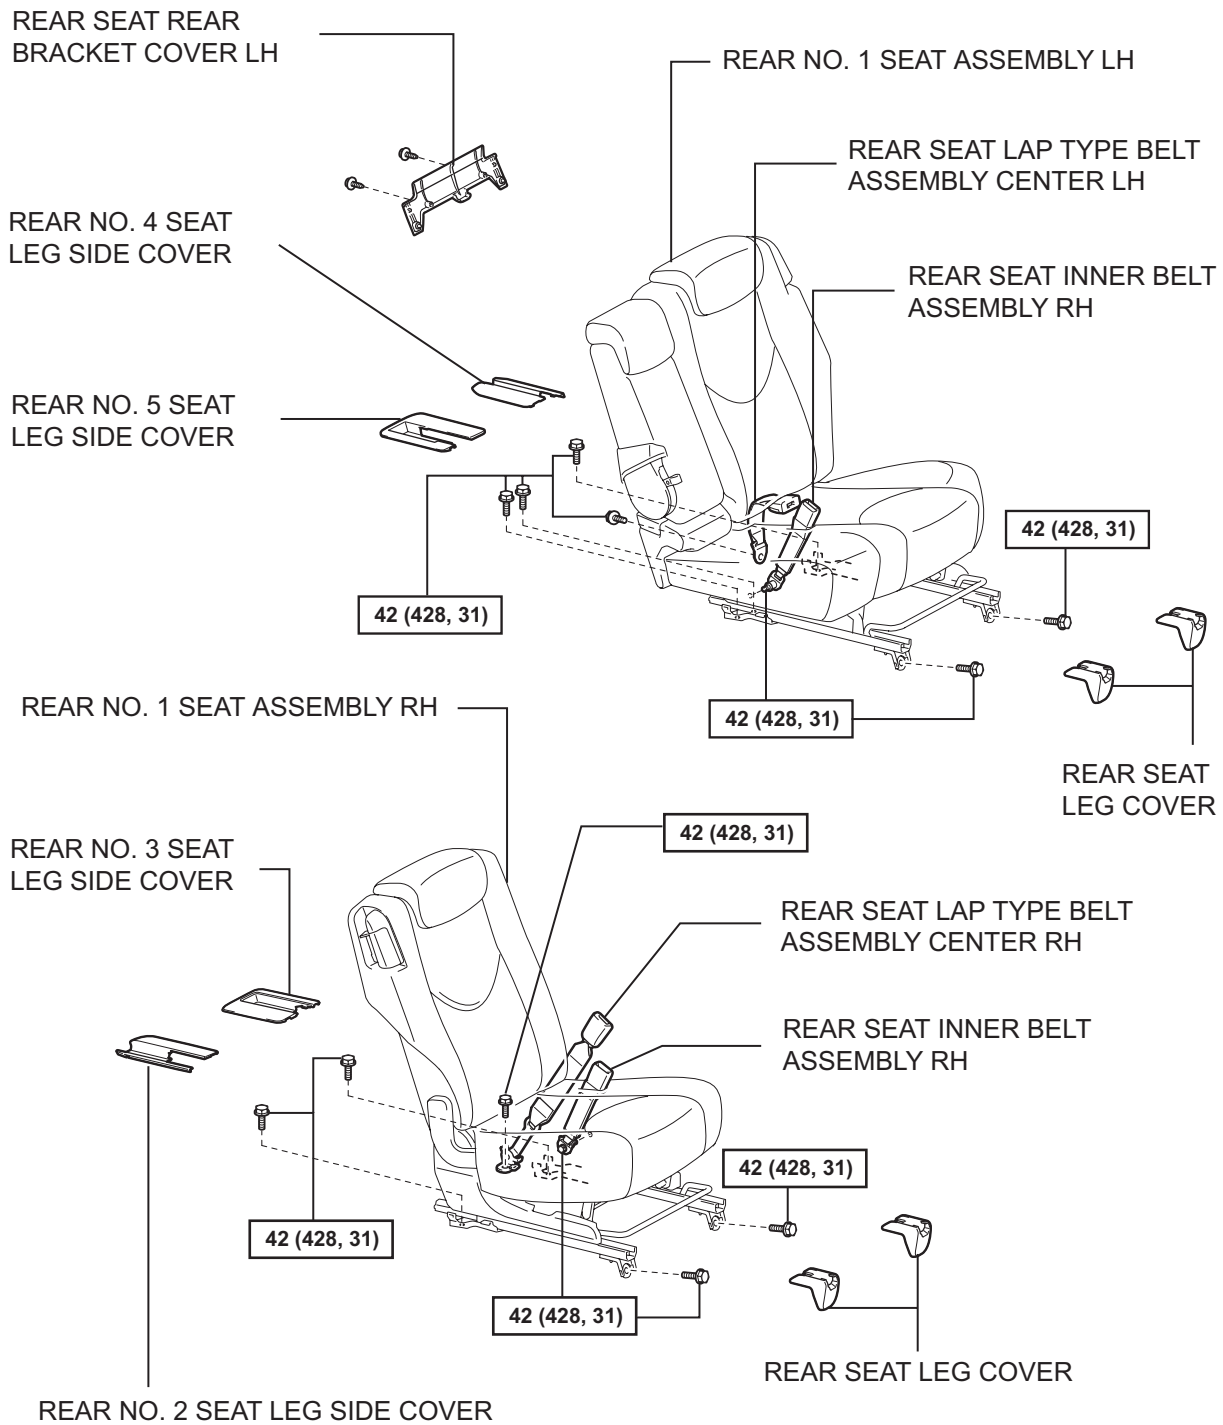


w/ Rear NO. 2 Seat



N*m (kgf*cm, ft.*lbf) : Specified torque


w/ Rear No. 2 Seat

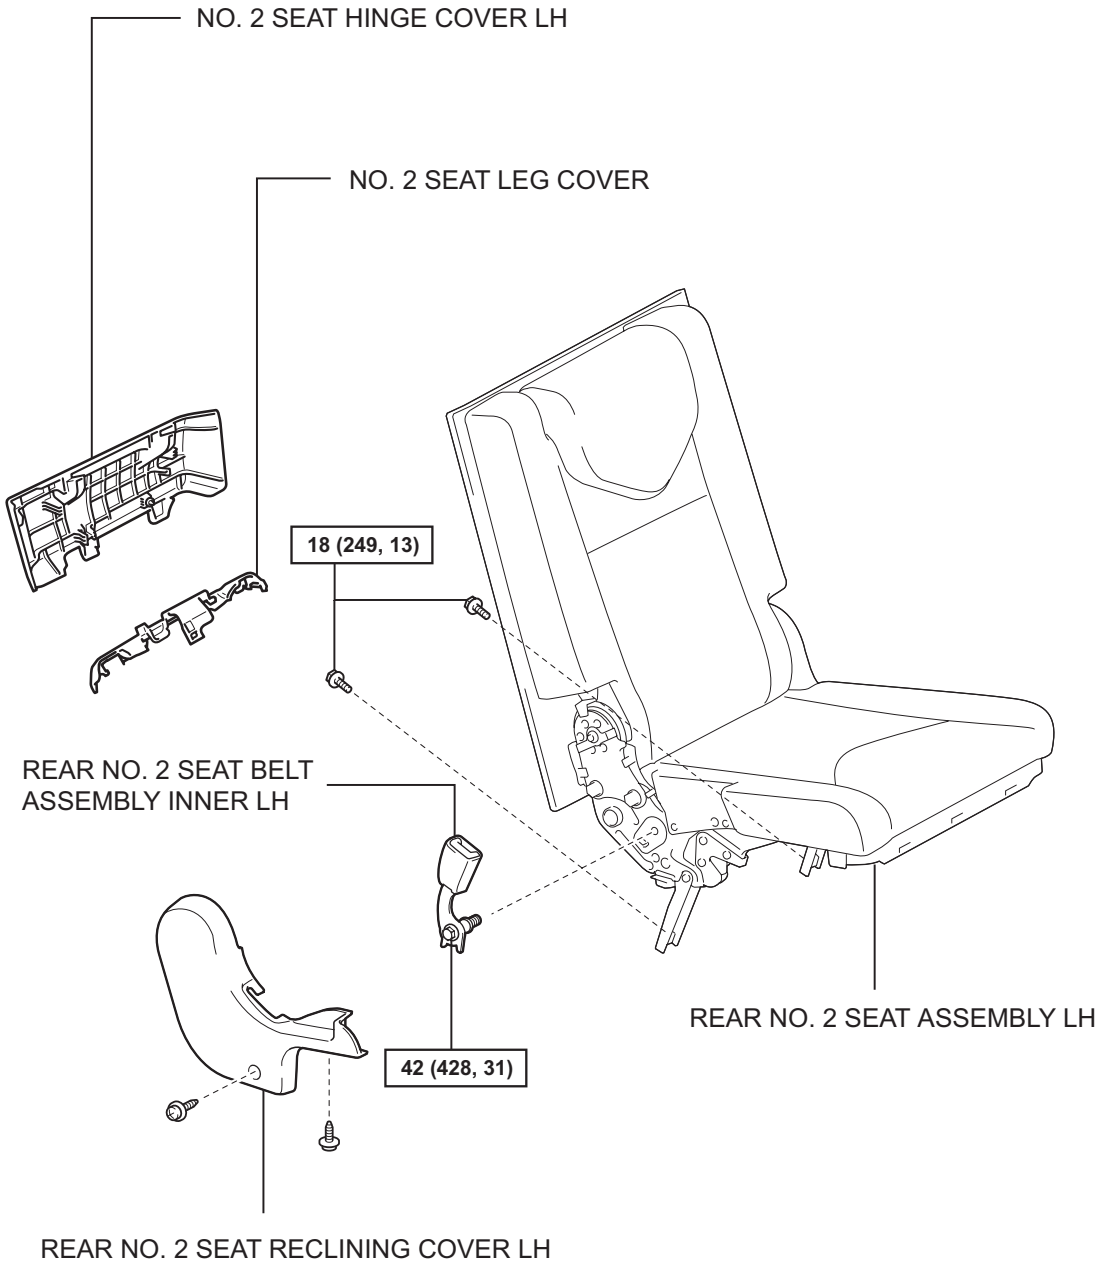


N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL


1. REMOVE REAR SEAT LEG COVER
2. REMOVE REAR NO. 2 SEAT LEG SIDE COVER
3. REMOVE REAR NO. 3 SEAT LEG SIDE COVER (w/ Rear No. 2 Seat) (See page [SE-81](#))
4. REMOVE REAR NO. 3 SEAT LEG SIDE COVER (w/o Rear No. 2 Seat) (See page [SE-81](#))
5. REMOVE REAR NO. 4 SEAT LEG SIDE COVER
6. REMOVE REAR NO. 5 SEAT LEG SIDE COVER
7. REMOVE REAR SEAT LAP TYPE BELT ASSEMBLY CENTER RH (w/o Rear No. 2 Seat)
(a) Remove the bolt and seat belt.

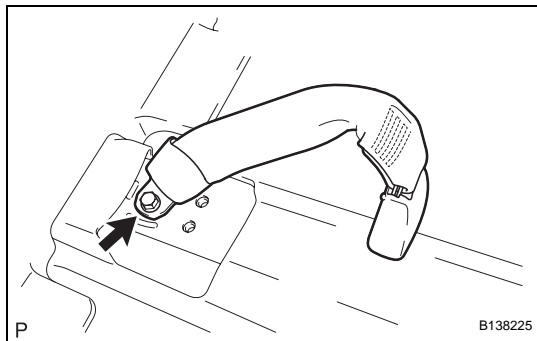


8. REMOVE REAR SEAT LAP TYPE BELT ASSEMBLY CENTER RH (w/ Rear No. 2 Seat)
(a) Remove the bolt and seat belt.
9. REMOVE REAR NO. 1 SEAT ASSEMBLY LH (See page [SE-50](#))
10. REMOVE REAR SEAT REAR BRACKET COVER LH (See page [SE-54](#))

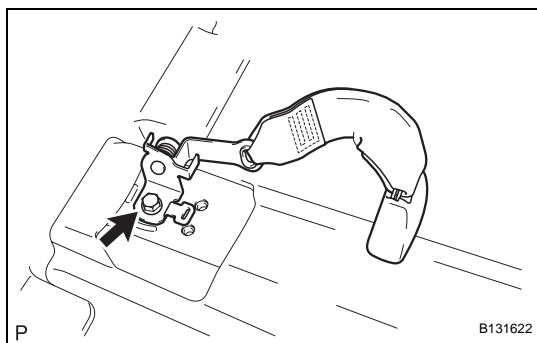

11. REMOVE REAR SEAT LAP TYPE BELT ASSEMBLY CENTER LH
(a) Remove the bolt and the seat belt.

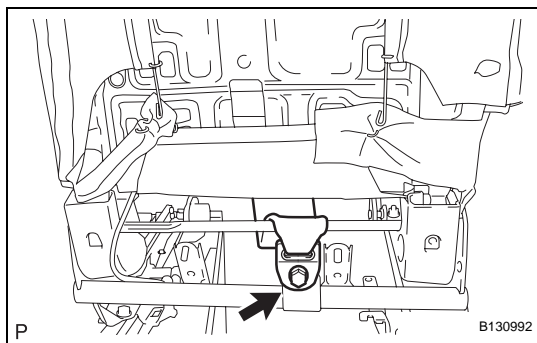


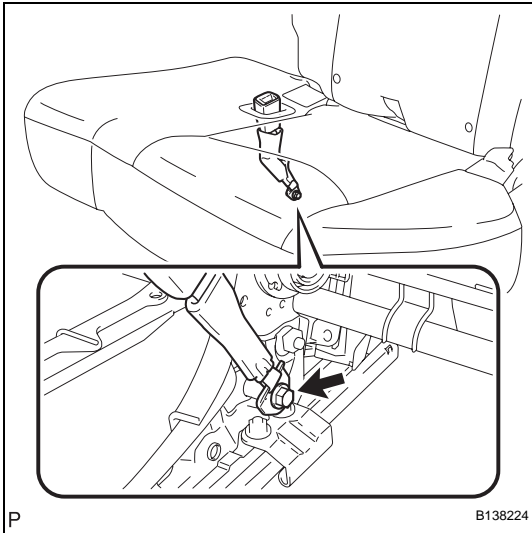

12. REMOVE REAR SEAT INNER BELT ASSEMBLY RH (for 60/40 Split Seat Type LH Side)

- (a) Remove the bolt and the seat belt.

13. REMOVE REAR NO. 1 SEAT ASSEMBLY RH (See page [SE-84](#))

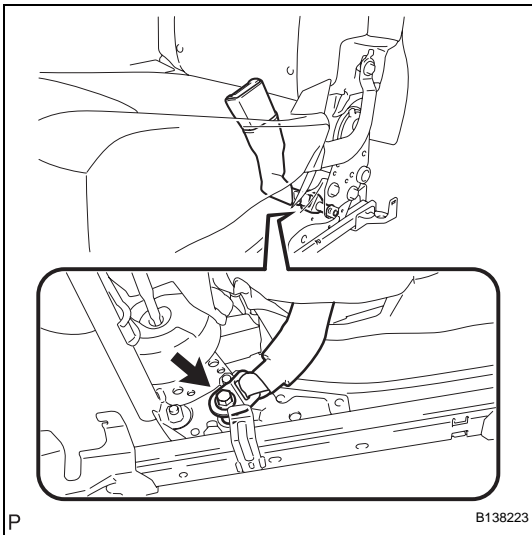

14. REMOVE REAR SEAT INNER BELT ASSEMBLY RH (for 60/40 Split Seat Type RH Side)

- (a) Remove the bolt and the seat belt.


15. REMOVE NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))

16. REMOVE NO. 2 SEAT LEG COVER (w/ Rear No. 2 Seat) (See page [SE-109](#))

17. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-110](#))


18. REMOVE REAR NO. 2 SEAT RECLINING COVER LH (w/ Rear No. 2 Seat) (See page [SE-111](#))

SB

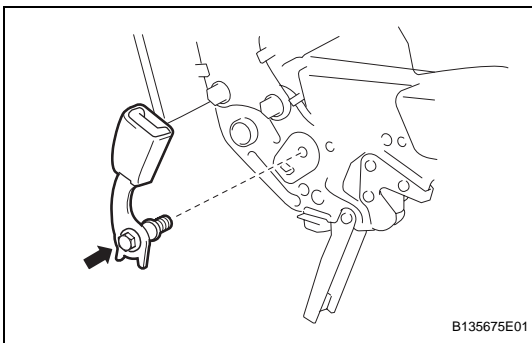

19. REMOVE REAR NO. 2 SEAT INNER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)

- (a) Remove the bolt and seat belt.

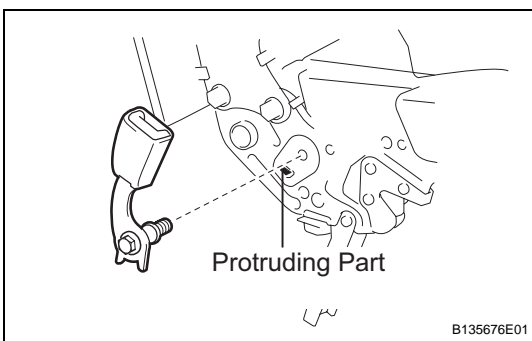

INSTALLATION


1. INSTALL REAR NO. 2 SEAT INNER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)

- (a) Install the seat belt with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)



2. INSTALL REAR NO. 2 SEAT RECLINING COVER LH (w/ Rear No. 2 Seat) (See page [SE-121](#))

3. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-121](#))


4. **INSTALL NO. 2 SEAT LEG COVER (w/ Rear No. 2 Seat)** (See page [SE-123](#))
5. **INSTALL NO. 2 SEAT HINGE COVER (w/ Rear No. 2 Seat)** (See page [SE-123](#))
6. **INSTALL REAR SEAT INNER BELT ASSEMBLY RH (for 60/40 Split Seat Type RH Side)**
 - (a) Install the belt with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
7. **INSTALL REAR NO. 1 SEAT ASSEMBLY RH** (See page [SE-97](#))

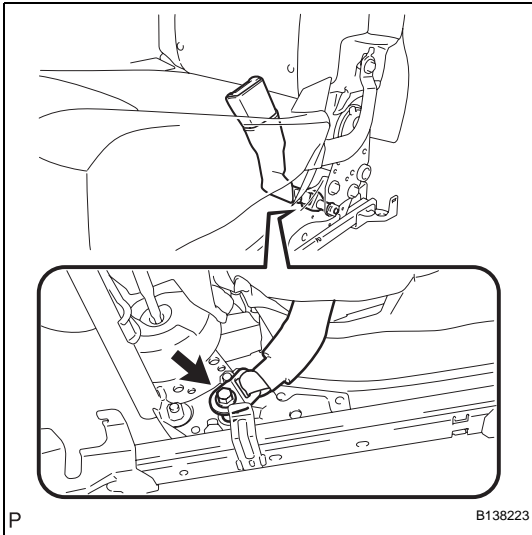

8. **INSTALL REAR SEAT INNER BELT ASSEMBLY RH (for 60/40 Split Seat Type LH Side)**
 - (a) Install the belt with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

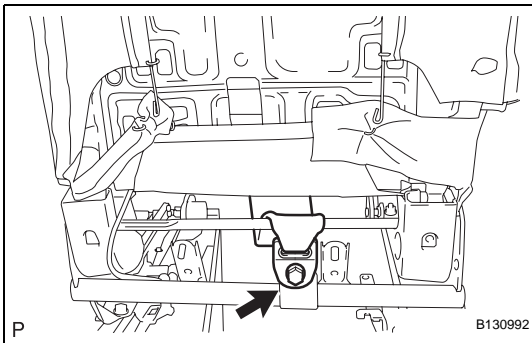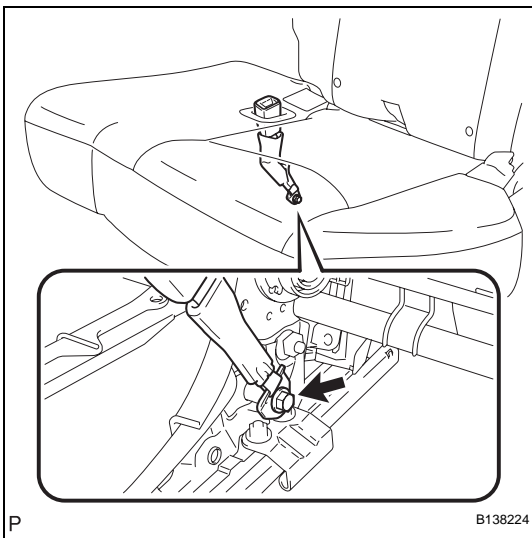

9. **INSTALL REAR SEAT LAP TYPE BELT ASSEMBLY CENTER LH**
 - (a) Install the belt with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
10. **INSTALL REAR SEAT REAR BRACKET COVER LH** (See page [SE-60](#))
11. **INSTALL REAR NO. 1 SEAT ASSEMBLY LH** (See page [SE-64](#))

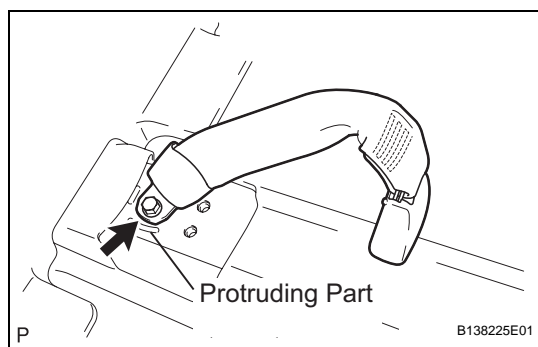
**12. INSTALL REAR SEAT LAP TYPE BELT ASSEMBLY CENTER RH (w/o Rear No. 2 Seat)**

- (a) Install the belt with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

The anchor part of the seat belt must not overlap the protruding part.

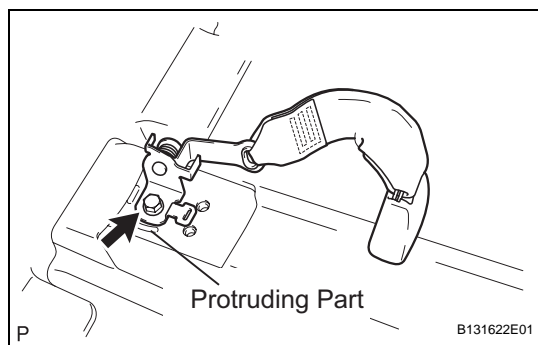**13. INSTALL REAR SEAT LAP TYPE BELT ASSEMBLY CENTER RH (w/ Rear No. 2 Seat)**

- (a) Install the belt with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

The anchor part of the seat belt must not overlap the protruding part.

14. INSTALL REAR NO. 5 SEAT LEG SIDE COVER**15. INSTALL REAR NO. 4 SEAT LEG SIDE COVER****16. INSTALL REAR NO. 3 SEAT LEG SIDE COVER (w/ Rear No. 2 Seat) (See page [SE-72](#))****17. INSTALL REAR NO. 3 SEAT LEG SIDE COVER (w/o Rear No. 2 Seat) (See page [SE-72](#))****18. INSTALL REAR NO. 2 SEAT LEG SIDE COVER****19. INSTALL REAR SEAT LEG COVER**